



SSANGYONG®

VERSION: **2012.09** DATE: SEPTEMBER, 2012

CHAIRMAN

DRIVE	DATA STREAM	READ / CLEAR CODES	ACTIVATION	ADAPTATION	INITIAL CODING
LH-SFI / LH-SFI LEFT	✓	✓	✓	✓	
LH-SFI RIGHT	✓	✓	✓	✓	
HFM-SFI	✓	✓	✓	✓	✓
ME 2.0 / 2.1	✓	✓	✓	✓	✓
ENGINE GASOLINE(2.3/2.8/3.2 MSE)	✓	✓	✓	✓	
ENGINE GASOLINE(3.2 BOSCH)	✓	✓			
EAG 722.5 (5-speed automatic ETC)	✓	✓	✓		
EGS 722.6	✓	✓	✓	✓	
AT(NAG 5TH STEP GATE)		✓			
AT(DC 5AT T-TRONIC)	✓	✓		✓	
AT(BTRA 4AT)	✓	✓		✓	
IFI / ERE (Electronic Inline injection)	✓	✓			
EDS		✓			

CHASSIS	DATA STREAM	READ / CLEAR CODES	ACTIVATION	ADAPTATION	INITIAL CODING
ABS	✓	✓			
ASR	✓	✓			
ABS(ABS/ABD/ASR 5.3)	✓	✓	✓		
ABS(BOSCH)	✓	✓	✓		
ABS(TEVES)	✓	✓	✓	✓	
ABS/ESP(TEVES)	✓	✓	✓	✓	
ETS	✓	✓			
ESP (Electronic Stability Program)	✓	✓			
ECS(VDO)	✓	✓			

BODY	DATA STREAM	READ / CLEAR CODES	ACTIVATION	ADAPTATION	INITIAL CODING
AB (SRS / Airbag)	✓	✓			
SRS-AIRBAG(BOSCH)		✓			
SRS-AIRBAG(SRE-NCS)		✓			

REXTON

System	DATA STREAM	READ / CLEAR CODES	ACTIVATION	FUNCTIONS
ENGINE DIESEL(D27DT C2I EURO-3)	✓	✓	✓	1.FUEL LEAK DETECTION 2.INJECTOR SPECIFIC DATA 3.RAIL PRESSURE INITIALIZATION
ENGINE DIESEL(D27DT C3I EURO-4)	✓	✓	✓	1.FUEL LEAK DETECTION 2.INJECTOR SPECIFIC DATA 3.RAIL PRESSURE INITIALIZATION 4.EGR SYSTEM INITIALIZATION 5.THROTTLE INITIALIZATION
ENGINE DIESEL(D20DT C3I EURO-4)	✓	✓	✓	1.FUEL LEAK DETECTION 2.INJECTOR SPECIFIC DATA 3.RAIL PRESSURE INITIALIZATION 4.EGR SYSTEM INITIALIZATION 5.THROTTLE INITIALIZATION
ENGINE GASOLINE(2.3/2.8/3.2 MSE)	✓	✓	✓	1.ECU INITIALIZATION
AT(DC 5AT T-TRONIC)	✓	✓		1.LOCK-UP REOPERATION 2.LOCK-UP CONSTRAINT CANCEL 3.RESET ADAPTATION VALUE 4.LOAD ADAPTATION VALUE 5.STORE ADAPTATION VALUE
AT(BTRA 4AT)	✓	✓		1.ERASE TPS LEARNING VALUE
AT(DSI 6TH)	✓	✓		
ABS(TEVES)	✓	✓	✓	1.CLEARING VEHICLE CODING 2.ABS AIR BLEEDING
ABS/ESP(TEVES)	✓	✓	✓	1.SENSOR INITIALIZATION 2.CLEARING VEHICLE CODING 3.ABS AIR BLEEDING
ABS(BOSCH)	✓	✓	✓	
ABS(ABS/ABD/ASR 5.3)	✓	✓	✓	
SRS-AIRBAG(SRE-NCS)		✓		
SRS-AIRBAG(SRE-6)		✓		
4WD(NEW PART TIME)	✓	✓		
4WD(NEW TOD)	✓	✓		
4WD(TOD)		✓		
4WD(PART TIME)		✓		
SSPS(POWER STEERING)	✓	✓		
HUBER EGR		✓		
TGS LEVER-DC LEVER		✓		
RK-STICS	✓	✓		

STAVIC / RODIUS

System	DATA STREAM	READ / CLEAR CODES	ACTIVATION	FUNCTIONS
ENGINE DIESEL(D27DT C2I EURO-3)	✓	✓	✓	1.FUEL LEAK DETECTION 2.INJECTOR SPECIFIC DATA 3.RAIL PRESSURE INITIALIZATION
ENGINE DIESEL(D27DT C3I EURO-4)	✓	✓	✓	1.FUEL LEAK DETECTION 2.INJECTOR SPECIFIC DATA 3.RAIL PRESSURE INITIALIZATION 4.EGR SYSTEM INITIALIZATION 5.THROTTLE INITIALIZATION
ENGINE GASOLINE(3.2 MSE)	✓	✓	✓	1.ECU INITIALIZATION
AT	✓	✓		1.LOCK-UP REOPERATION 2.LOCK-UP CONSTRAINT CANCEL 3.RESET ADAPTATION VALUE 4.LOAD ADAPTATION VALUE 5.STORE ADAPTATION VALUE
ABS(TEVES)	✓	✓	✓	1.CLEARING VEHICLE CODING 2.ABS AIR BLEEDING
ABS/ESP(TEVES)	✓	✓	✓	1.SENSOR INITIALIZATION 2.CLEARING VEHICLE CODING 3.ABS AIR BLEEDING
SRS-AIRBAG(SRE-NCS)		✓		
4WD(NEW PART TIME)	✓	✓		
4WD(NEW TOD)	✓	✓		
TGS LEVER-DC LEVER		✓		
RK-STICS	✓	✓		
RE-STICS	✓	✓		

KYRON

System	DATA STREAM	READ / CLEAR CODES	ACTIVATION	FUNCTIONS
ENGINE DIESEL(D27DT C2I EURO-3)	✓	✓	✓	1.FUEL LEAK DETECTION 2.INJECTOR SPECIFIC DATA 3.RAIL PRESSURE INITIALIZATION
ENGINE DIESEL(D27DT C3I EURO-4)	✓	✓	✓	1.FUEL LEAK DETECTION 2.INJECTOR SPECIFIC DATA 3.RAIL PRESSURE INITIALIZATION 4.EGR SYSTEM INITIALIZATION 5.THROTTLE INITIALIZATION
ENGINE DIESEL(D20DT C2I EURO-3)	✓	✓	✓	1.FUEL LEAK DETECTION 2.INJECTOR SPECIFIC DATA 3.RAIL PRESSURE INITIALIZATION
ENGINE DIESEL(D20DT C3I EURO-4)	✓	✓	✓	1.FUEL LEAK DETECTION 2.INJECTOR SPECIFIC DATA 3.RAIL PRESSURE INITIALIZATION 4.EGR SYSTEM INITIALIZATION 5.THROTTLE INITIALIZATION
ENGINE GASOLINE(2.3/3.2 MSE)	✓	✓	✓	1.ECU INITIALIZATION
AT(DC 5AT T-TRONIC)	✓	✓		1.LOCK-UP REOPERATION 2.LOCK-UP CONSTRAINT CANCEL 3.RESET ADAPTATION VALUE 4.LOAD ADAPTATION VALUE 5.STORE ADAPTATION VALUE
AT(DSI 6TH)	✓	✓		
ABS(TEVES)	✓	✓	✓	1.CLEARING VEHICLE CODING 2.ABS AIR BLEEDING
ABS/ESP(TEVES)	✓	✓	✓	1.SENSOR INITIALIZATION 2.CLEARING VEHICLE CODING 3.ABS AIR BLEEDING
SRS-AIRBAG(SRE-NCS)		✓		
TGS LEVER-DC LEVER		✓		
4WD(NEW PART TIME)	✓	✓		
4WD(NEW TOD)	✓	✓		
SSPS(POWER STEERING)	✓	✓		
RK-STICS	✓	✓		

ACTYON

System	DATA STREAM	READ / CLEAR CODES	ACTIVATION	FUNCTIONS
ENGINE DIESEL(D20DT C2I EURO-3)	✓	✓	✓	1.FUEL LEAK DETECTION 2.INJECTOR SPECIFIC DATA 3.RAIL PRESSURE INITIALIZATION
ENGINE DIESEL(D20DT C3I EURO-4)	✓	✓	✓	1.FUEL LEAK DETECTION 2.INJECTOR SPECIFIC DATA 3.RAIL PRESSURE INITIALIZATION 4.EGR SYSTEM INITIALIZATION 5.THROTTLE INITIALIZATION
ENGINE GASOLINE(2.3 MSE)	✓	✓	✓	1.ECU INITIALIZATION
AT(DSI 4TH)	✓	✓		1.ERASE TPS LEARNING VALUE
AT(DSI 6TH)	✓	✓		
ABS(TEVES)	✓	✓	✓	1.CLEARING VEHICLE CODING 2.ABS AIR BLEEDING
ABS/ESP(TEVES)	✓	✓	✓	1.SENSOR INITIALIZATION 2.CLEARING VEHICLE CODING 3.ABS AIR BLEEDING
SRS-AIRBAG(SRE-NCS)		✓		
4WD(NEW PART TIME)	✓	✓		
4WD(NEW TOD)	✓	✓		
RK-STICS	✓	✓		

MUSSO

System	DATA STREAM	READ / CLEAR CODES	ACTIVATION	FUNCTIONS
ENGINE GASOLINE(2.3/3.2 MSE)	✓	✓	✓	1.ECU INITIALIZATION
AT	✓	✓		1.ERASE TPS LEARNING VALUE
ABS(BOSCH)	✓	✓	✓	
ABS(ABS/ABD 5.0)	✓	✓	✓	
ABS(ABS/ABD/EBD 5.3)	✓	✓	✓	
SRS-AIRBAG		✓		
4WD(TOD)		✓		
4WD(PART TIME)		✓		
HUBER EGR		✓		

KORANDO

System	DATA STREAM	READ / CLEAR CODES	ACTIVATION	FUNCTIONS
ENGINE GASOLINE(2.3/3.2 MSE)	✓	✓	✓	1.ECU INITIALIZATION
AT	✓	✓		1.ERASE TPS LEARNING VALUE
ABS(BOSCH)	✓	✓	✓	
ABS(ABS/ABD 5.0)	✓	✓	✓	
ABS(ABS/ABD/EBD 5.3)	✓	✓	✓	
SRS-AIRBAG		✓		
4WD(TOD)		✓		
4WD(PART TIME)		✓		
HUBER EGR		✓		

ISTANA

System	DATA STREAM	READ / CLEAR CODES	ACTIVATION	FUNCTIONS
ENGINE GASOLINE(2.8 MSE)	✓	✓	✓	1.ECU INITIALIZATION

CHAIRMAN W

System	DATA STREAM	READ / CLEAR CODES	ACTIVATION	FUNCTIONS
ENGINE GASOLINE(G36 VDO)		✓		
AT(NAG 7TH)		✓		
ABS/ESP		✓		
SRS-AIRBAG		✓		

The information contained herein is the exclusive property of Autoland Scientech® and shall not be distributed, reproduced, or disclosed in whole or in part without prior written permission of Autoland Scientech®. Autoland Scientech® reserve the right to make any change without notice. The trademarks mentioned belong to the owners.