

ISUZU ISUZU® TRUCK / BUS

VERSION: 2013.05

Models equipped with OBD-II Connector.

TRUCK N-SERIES

ENGINE

TYPE	YEAR	ECU INFO.	READ/CLEAR CODE	DATA STREAM	ACTIVATION	ADAPTATION
4HF1 (CNG)	2004	✓	✓			<ol style="list-style-type: none"> 1. Clear ISC Learned Values 2. Clear O2 Sensor 1 Threshold Values 3. Clear F/B Duty Average At Idling
4HG1 (LPG)	2004 - 2006	✓	✓			<ol style="list-style-type: none"> 1. Clear ISC Learned Values 2. Clear O2 Sensor 1 Threshold Values 3. Clear F/B Duty Average At Idling
4HK1/4JJ1 (C/Rail_Euro2)	2008	✓	✓			<ol style="list-style-type: none"> 1. Fuel Supply Pump Learn Resetting 2. Display Injector Codes 3. Injector ID Coded Registration
4HK1/4JJ1 (C/Rail_Euro3)	2008	✓	✓			<ol style="list-style-type: none"> 1. Fuel Supply Pump Learn Resetting 2. Display Injector Codes 3. Injector ID Coded Registration
4HK1-TC (C/Rail_NLT)	2007 - 2008	✓				

TYPE	YEAR	ECU INFO.	READ/CLEAR CODE	DATA STREAM	ACTIVATION	ADAPTATION
4HK1-TC (C/Rail)	2007 - 2010	✓	✓	✓	<ol style="list-style-type: none"> 1. Fuel Pressure Control 2. Pre Injection Control 3. Injection Timing Control 4. Injector Forced Drive 5. Cylinder Balance Test 6. Intake Throttle Solenoid Control 7. EGR Solenoid Control 8. Turbocharger Solenoid Control 9. Glow Relay Control 10. Exhaust Brake Control 11. Exhaust Throttle Control 	<ol style="list-style-type: none"> 1. DPD Status Resetting 2. DPD Normal Regeneration Control 3. DPD Slow Regeneration Control 4. Fuel Supply Pump Learn Resetting 5. Display Injector Codes
4HK1-TC (C/Rail)	2005 - 2006	✓				
4HL1/4HJ1 (C/Rail)	2002 - 2003	✓				
4HL1-NA (C/Rail)	2004 - 2006	✓				
4HL1-TC (C/Rail)	2004 - 2006	✓				
4HV1 (CNG)	2005-2008	✓	✓			<ol style="list-style-type: none"> 1. Clear Injection Learned Value 2. Clear Air Fuel Ratio Threshold 3. Clear Throttle Idle Learned Value 4. Clear Close Throttle Learned Value
4JG2	2003 - 2006	-	✓	✓	1. EGR Solenoid Test	-
4JG2 (LPG)	2004 - 2006	✓	✓			<ol style="list-style-type: none"> 1. Clear ISC Learned Values 2. Clear O2 Sensor 1 Threshold Values 3. Clear F/B Duty Average At Idling

TYPE	YEAR	ECU INFO.	READ/CLEAR CODE	DATA STREAM	ACTIVATION	ADAPTATION
4JH1-TC Bosch	2001 - 2008		✓		1. Engine Telltale (Check Light) Test 2. EGR Solenoid Test 3. Glow Time Relay Test 4. Glow Time Telltale Test 5. RPM Control	1. Program VIN 2. Lock ECU
4JJ1-TC (C/Rail)	2007 - 2010	✓	✓	✓	1. Fuel Pressure Control 2. Pre Injection Control 3. Injection Timing Control 4. Injector Forced Drive 5. Cylinder Balance Test 6. Intake Throttle Solenoid Control 7. EGR Solenoid Control 8. Turbocharger Solenoid Control 9. Glow Relay Control 10. Exhaust Brake Control 11. Exhaust Throttle Control	1. DPD Status Resetting 2. DPD Normal Regeneration Control 3. DPD Slow Regeneration Control 4. Fuel Supply Pump Learn Resetting 5. Display Injector Codes
4JJ1-TC (C/Rail_NLT)	2007-2008	✓				

TRANSMISSION

TYPE	YEAR	ECU INFO.	READ/CLEAR CODE	DATA STREAM	ACTIVATION	ADAPTATION
AT A460	2007-2011	✓	✓			-
Smoother / Smoother-Ex	2007-2011	✓	✓		-	1. PTO Requested Engine Speed

BODY

TYPE	YEAR	ECU INFO.	READ/CLEAR CODE	DATA STREAM	ACTIVATION	ADAPTATION
Body Control Module		✓	✓			

TRUCK F/G/C/E SERIES

ENGINE

TYPE	YEAR	ECU INFO.	READ/CLEAR CODE	DATA STREAM	ACTIVATION	ADAPTATION
4HK1-TC (C/Rail)	2008 - 2010	✓	✓	✓	<ol style="list-style-type: none"> 1. Fuel Pressure Control 2. Pre Injection Control 3. Injection Timing Control 4. Injector Forced Drive 5. Cylinder Balance Test 6. Intake Throttle Solenoid Control 7. EGR Solenoid Control 8. Turbocharger Solenoid Control 9. Glow Relay Control 10. Exhaust Brake Control 11. Exhaust Throttle Control 	<ol style="list-style-type: none"> 1. DPD Status Resetting 2. DPD Normal Regeneration Control 3. DPD Slow Regeneration Control 4. Fuel Supply Pump Learn Resetting 5. Display Injector Codes
4HK1/6HK1 (C/Rail_Euro2)	2008	✓	✓			<ol style="list-style-type: none"> 1. Fuel Supply Pump Learn Resetting 2. Display Injector Codes 3. Injector ID Coded Registration 4. Display Fuel Delivery Rate Data
4HK1/6HK1 (C/Rail_Euro3)	2008	✓	✓			<ol style="list-style-type: none"> 1. Fuel Supply Pump Learn Resetting 2. Display Injector Codes 3. Injector ID Coded Registration 4. Display Fuel Delivery Rate Data

TYPE	YEAR	ECU INFO.	READ/CLEAR CODE	DATA STREAM	ACTIVATION	ADAPTATION
6HK1-TC (C/Rail)	2007 - 2010	✓	✓	✓		1. DPD Status Resetting 2. DPD Normal Regeneration Control 3. DPD Slow Regeneration Control 4. Fuel Supply Pump Learn Resetting 5. Display Injector Codes 6. Display Injector Quantity Trim
6WG1-TC (C/Rail)	2007 - 2010	✓	✓	✓		1. DPD Status Resetting 2. DPD Normal Regeneration Control 3. DPD Slow Regeneration Control 4. Fuel Supply Pump Learn Resetting 5. Display Injector Codes 6. Display Injector Quantity Trim
6UZ1-TC (C/Rail)	2010	✓	✓			

TRANSMISSION

TYPE	YEAR	ECU INFO.	READ/CLEAR CODE	DATA STREAM	ACTIVATION	ADAPTATION
Smoother / Smoother-Fx	2007-2011	✓	✓		-	1. PTO Requested Engine Speed

CHASSIS

TYPE	YEAR	ECU INFO.	READ/CLEAR CODE	DATA STREAM	ACTIVATION	ADAPTATION
ABS 6		✓	✓	✓		

BUS LT/LV SERIES

ENGINE

TYPE	YEAR	ECU INFO.	READ/CLEAR CODE	DATA STREAM	ACTIVATION	ADAPTATION
6HF1-TC (CNG)	2007 - 2008	✓				
6HK1-TC (C/Rail)	2007 - 2010	✓	✓			1. DPD Status Resetting 2. DPD Normal Regeneration Control 3. DPD Slow Regeneration Control 4. Fuel Supply Pump Learn Resetting 5. Display Injector Codes 6. Display Injector Quantity Trim
6HK1-TC (C/Rail_NLT)	2007 - 2008	✓				
6HK1-TC (C/Rail_Euro3)	2007 - 2008	✓				
6UZ1-TC (C/Rail_Euro3)	2007 - 2008	✓				

CHASSIS

TYPE	YEAR	ECU INFO.	READ/CLEAR CODE	DATA STREAM	ACTIVATION	ADAPTATION
ABS 6		✓	✓	✓		

The information contained herein is the exclusive property of Autoland Scientech® and shall not be distributed, reproduced, or disclosed in whole or in part without prior written permission of Autoland Scientech®. Autoland Scientech® reserve the right to make any change without notice. The trademarks mentioned belong to the owners.